

Saw chain grinder Model X5

Manual



Contents

Foreword	1
General	2
Safety Instructions	3
Technical data	4
Compressed air	4
Space requirement for the machine	5
Overview	6
Grinder	7
Grinding section	8
Operating panel	9
Machine use	11
Before grinding	11
Working principle	11
Compressed air:	12
Drive link thickness	13
Setting the pitch	15
Feed setting	16
Grinding depth adjustment	17
Setting the grinding angle α	18
Main screen	19
Main screen touch display	19
Start page	19
Contact page	19
Grinding page	20
Grinding settings	21
Chain setting	25
Machine settings	28
Language setting	31
Alarm page	32
Alarm, grinding	32

Maintenance	35
Safety	35
Daily	35
Adjusting the air pressure	36
If necessary, check/clean compressed air	37
Cleaning machine	37
Changing the grinding wheel	40
Belt tensioning	41
Replacing the drive belt	42
Close-up images	43
Feeder unit linear control	43
Grinding wheel lifting cylinder	44
Swivel cylinder	45
Vertically adjustable chain table	45
Chain holder for long chains	46
Connections	47
Scale, grinder incline	47
Troubleshooting	48
Problem solving	48
The machine does not start	48
Motor guard triggered	48
Sensor arms do not rise/both sensor arms rise	48
Alarm from the frequency inverter	48

Foreword

Thank you for entrusting us to supply your company with an ANAB X5 chain grinder.

The purpose of the instruction manual is to provide basic and necessary knowledge concerning the functions and design of the machine.

The manual contains plenty of useful information you should know, even if you are familiar with grinders and their use.

Read the manual before putting the machine into operation, since correct care and handling are necessary to ensure that the chain grinder offers you optimal functionality and economy.

If you have any questions, kindly contact our Customer Service department or a sales representative, who will be happy to help.

In case of enquiries or if you would like to order spare parts, please specify the machine type, machine number and year of manufacture.

Year of manufacture:	
Machine type:	
Machine number:	
Delivery date:	
Checked by:	
Installation date:	
Signature:	
Remarks:	

Manufacturer: ANAB
 Åsbacksvägen 6
 SE-836 71 Ås
 SWEDEN
 Tel: +46 (0)63102058

E-mail: info@anab.nu
www.anab.nu

We reserve the right to change the technical specifications without prior notice.

Images may differ from your specific machine, depending on the machine model.

General

The ANAB X5 chain grinder is an automatic grinding machine for saw and machine chains. Working methods and adjustment options mean that just about any type of chain can be sharpened.

Automatic detection of the direction of the cutting teeth means that the grinding wheel is always in the correct position. The machine operates electro-pneumatically and the functions are controlled by a programmable control unit.

All electrical equipment is located in the lower part of the machine, where it is protected. The machine is designed for long-term and largely maintenance-free operation; only minor adjustments are required.

When servicing the machinery, only trained service personnel should be engaged.

The following settings should be made prior to grinding:

- Drive link thickness
- Pitch
- Grinding depth / Rider height
- Felling and tooth length
- Compressed air
- Number of cutting teeth
- Setting the grinding angle α .

Chain type	Grinding wheel
1/4"	3 mm grinding wheel
.325"	4 mm grinding wheel
3/8" low profile	4 mm grinding wheel
.404"	3 mm grinding wheel with smaller diameter
.404" Stihl Rmhs	5.5 mm grinding wheel
3/4"	8 mm grinding wheel
15/20 mm scratcher chain	4 mm grinding wheel
15 mm chipper chain	6 mm grinding wheel
Tungsten scratcher chain	4 mm diamond grinding wheel (CBN)

Safety Instructions



- Whenever any work is carried out on or near a machine in operation (e.g. when profiling a grinding wheel), protective clothing, protective gloves, and a full-face visor must be worn!
- Hearing protection must be worn in the vicinity of a machine in operation!
- Only use original ANAB-approved grinding wheels!
- Always check that the chains are undamaged before grinding (for example, damaged teeth or rivets)!
- Crooked chains must be discarded or straightened before grinding!
- Broken chains (cutting teeth) must be repaired before grinding!
- Heavily chipped/burred chains must always be discarded!
- Close the door before grinding!
- Always check before operation that the compressed air gauge shows the approved value! Risk of explosion if the pressure is too high.
- Always make sure that there is no damage to the electrical connection before starting the machine!
- The electrical connection must be earthed by a professional!
- In the event of an electrical malfunction, a licenced electrician must be called in!
- In the event of malfunction in other machine parts: Contact your service engineer or ANAB!
- Always make sure that there are no unauthorised persons in the vicinity of the machine during operation!
- If a warning sign is missing or damaged and no longer clearly legible, it must be replaced as soon as possible!

Technical data

Drive system: Electrical/pneumatic.

Control system: PLC based, fully automatic or manually step by step. Sensor for cutting teeth, always grinds in the correct direction.

Grinding angle α : 0-35°

Drive link thickness: Continuous adjustment 1.3–3.0 mm.

Chain types: Standard chains

Max. pitch: 1/4" to 20 mm (see *Figure 11* page 15)

Grinding wheels: Special profile.

Electric motor: 0.75 kW frequency inverter.

Motor speed: Continuous adjustment with frequency inverter.

Display: 7"

Compressed air

Pressure: approx. 6 Bar.

Air requirement: min. 33 l/min.

— CAUTION —

The air should be separated from water after the main compressor

Connection: R 1/4"

Min. hose dimension: 10 mm internal.

Unit containing pressure regulator and shut-off valve included.

Space requirement for the machine

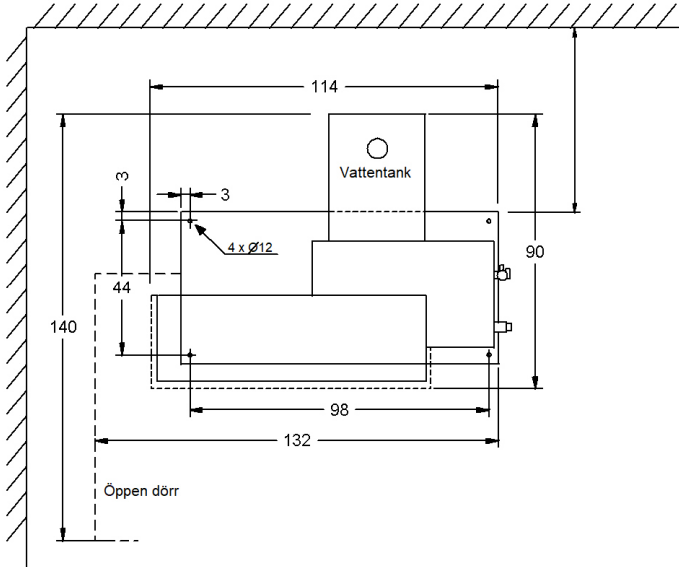


Image 1. Space requirement for machine

The distance between the wall and the machine should be at least 60 cm.


The distance to the wall should be at least 40 cm.

The height of the machine is approx. 208 cm.

There should be sufficient space around the machine so that working at the machine is not hampered.

Access to doors, hatches and protective panels when carrying out service work must also be ensured.


Overview

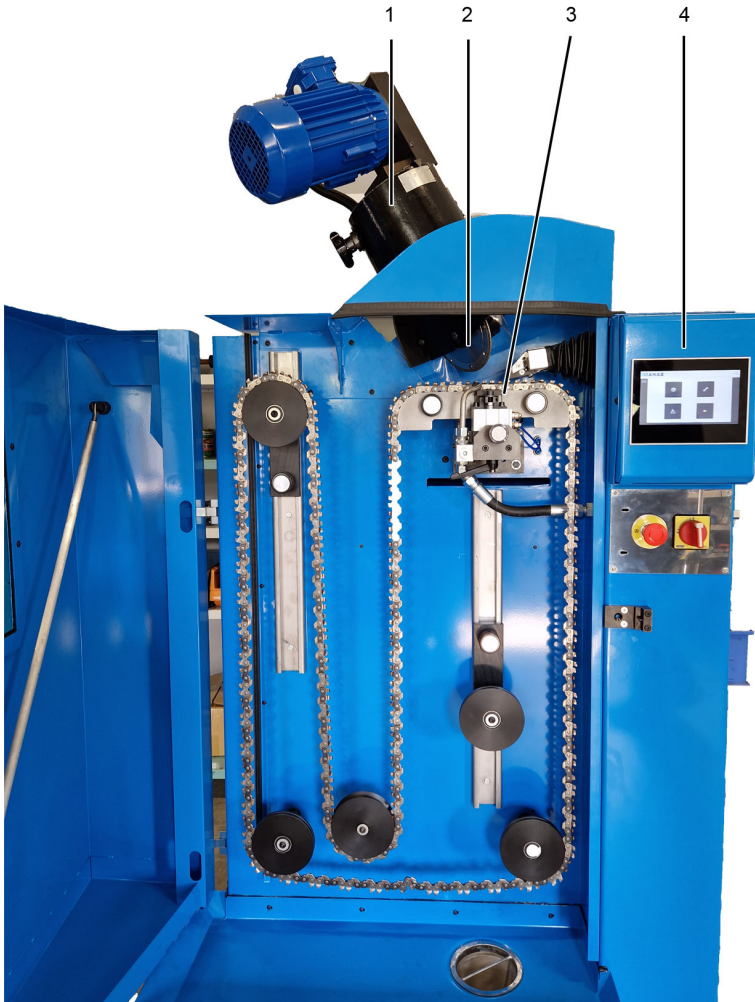

- | | | | |
|---|----------------|---|---------------|
| 1 | Grinder | 3 | Clamp |
| 2 | Grinding wheel | 4 | Control panel |

Image 2. Machine overview


Grinder

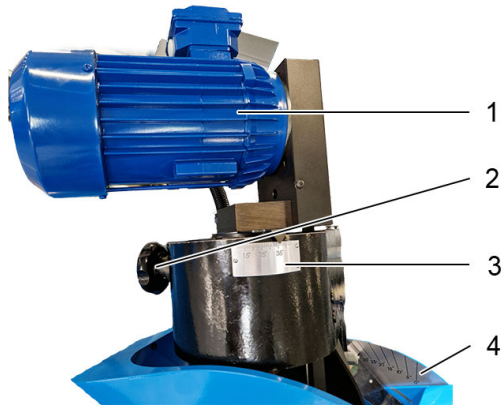

- | | | | |
|---|-------------------------------|---|--------------------------------|
| 1 | Motor belt drive | 3 | Scale, grinding angle α |
| 2 | Knob, grinding angle α | 4 | Scale, grinding depth β |

Image 3. Grinder

Grinding section

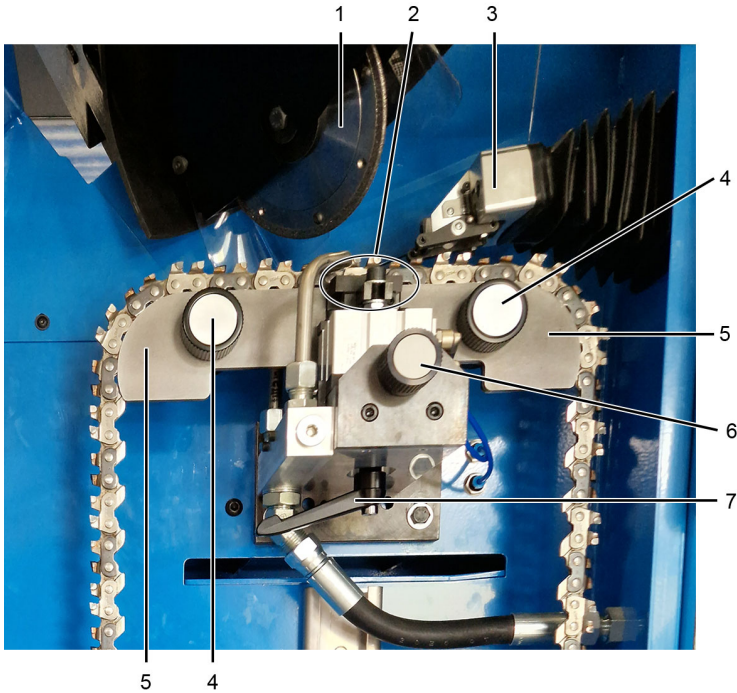

- | | |
|--------------------|--------------------------------|
| 1 Grinding wheel | 5 Chain rail plates |
| 2 Clamping piece | 6 Setting drive link thickness |
| 3 Feeder | 7 Locking knob, chain holder |
| 4 Gap setting knob | |


Image 4. Grinding section

Operating panel



- | | | | |
|---|--------------------------------|---|---|
| 1 | Touch display | 5 | Lift setting feeder unit, setting down-feed speed |
| 2 | Scale for pitch | 6 | Emergency stop |
| 3 | Setting the grinding quantity | 7 | Main switch |
| 4 | Setting grinding depth β | 8 | Air pressure gauge |

Image 5. Operating panel

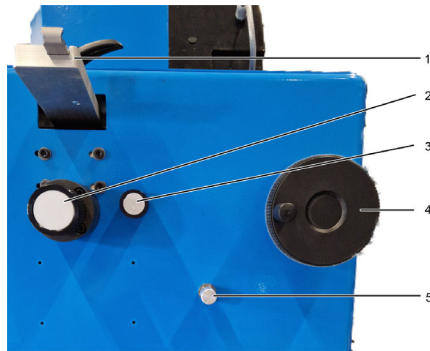

- | | | | |
|---|-----------------------------|---|------------------------------|
| 1 | Scale, pitch | 4 | Setting grinding depth |
| 2 | Setting grinding quantity | 5 | Lifting setting, feeder unit |
| 3 | Height setting, feeder unit | | |

Image 6. Operating panel side

Machine use

Before grinding

In principle, it is possible to grind rigid, damaged or otherwise defective chains, but this is not appropriate for safety reasons.

Visually inspect the chains thoroughly before grinding, keep an eye out for cracking around the rivets in particular. Always check that the chains are undamaged before grinding (for example, damaged teeth or rivets)! Clean the chains and lubricate them before grinding for best results. Discard defective chains.

The following settings should be made prior to grinding:

- Drive link thickness
- Pitch
- Grinding depth / Rider height
- Felling and tooth length
- Compressed air
- Number of cutting teeth
- Setting the grinding angle α .

Common chain defects requiring the chain to be discarded:

- Rigid chains, poorly lubricated with cuts in the rivets.
- Deep chips that require heavy grinding.
- Bent teeth or links.
- Fatigue damage, cracking around the rivets.
- Abraded teeth (tooth length should not be less than 5-6 mm on machine chains).
- Uneven filing, noticeably different tooth lengths.
- Dry chains, loose rivets.
- Crooked chains must be discarded or straightened before grinding!
- Broken chains (cutting teeth) must be repaired before grinding!
- Heavily chipped/burred chains must always be discarded!

Working principle


When feeding the chain, the machine detects each saw tooth and detects whether there is an inner or outer cutting tooth in the grinding position. After this, the grinding wheel is turned and lowered for grinding.

Compressed air:

The compressed air should be turned off with the valve (See *Figure 7 Pos 2 Shutting off air*) when the machine is not in use.

Open the air valve slowly.

Set the air pressure with knob (See *Figure 7 Pos 1 Knob, pressure regulator*) to 6 bar on the pressure gauge.

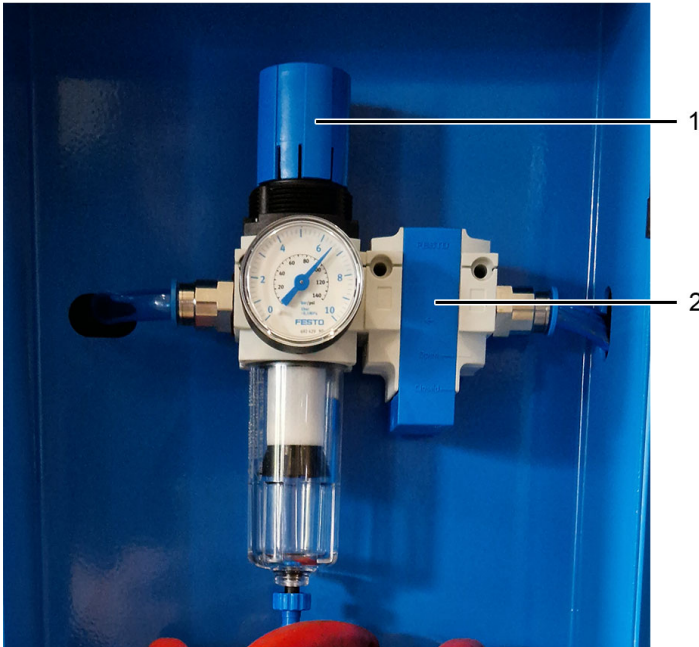


1 Knob, pressure regulator

2 Shutting off air

Image 7. Pressure gauge


Drive link thickness

- 1 Loosen the locking knob (See *Figure 8 Pos 4 Locking knob, chain holder*) on the underside of the chain holder.
- 2 Set the correct value using the adjustment knob (See *Figure 8 Pos 3 Setting drive link thickness*).
- 3 Increase or decrease the distance between the chain rail plates with the gap setting knobs (See *Figure 8 Pos 1 Gap setting knob*), so that the chain runs easily when fed.
- 4 Lock the setting with the locking knob (See *Figure 8 Pos 4 Locking knob, chain holder*) on the underside of the chain holder.

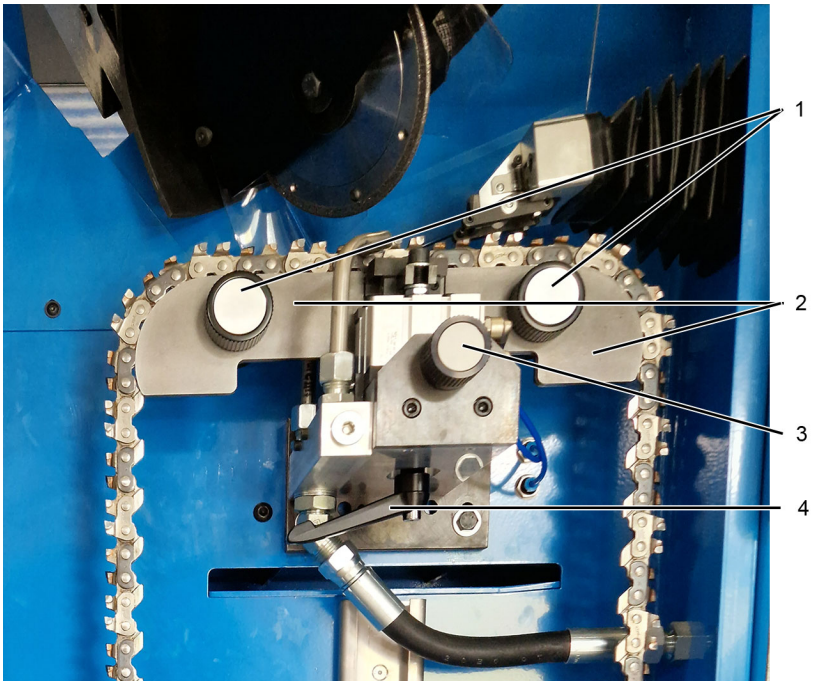


- | | | | |
|---|-------------------|---|------------------------------|
| 1 | Gap setting knob | 3 | Setting drive link thickness |
| 2 | Chain rail plates | 4 | Locking knob, chain holder |

Image 8. Chain holder Locking knob

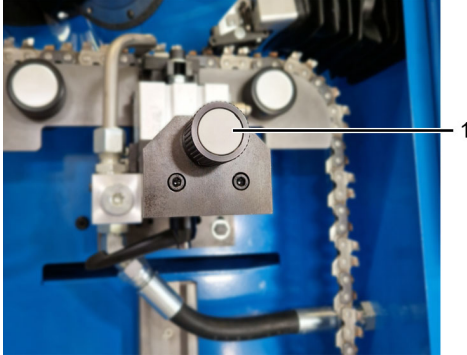

- 1 Setting drive link thickness

Image 9. Setting – drive link thickness

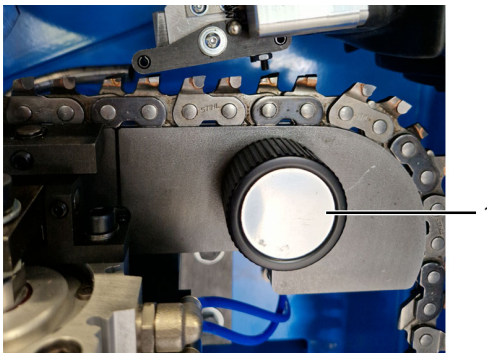

- 1 Gap setting knob

Image 10. Gap setting

Setting the pitch

- 1 Turn off the compressed air.
- 2 Loosen the locking knob on the top of the setting rail. (See *Figure 11*)
- 3 Slide the holder to the correct value on the scale.
- 4 Lock the settings with the locking knob.
- 5 Check that the forward feeding is correct for the chain in question. This can easily be done using **step operation**.



Image 11. Setting rail – pitch

Feed setting

The settings usually only need to be adjusted when changing the chain type. Power and compressed air must be turned on and the correct grinding wheel must be mounted. (See *Table* page 2)

- 1 Place the chain in the chain holder's groove and hang on the chain weight if necessary.
- 2 Move the chain's cutting tooth underneath the feed unit's sensor arms. You can press down the feeder to make sure that the correct sensor arm is touched. (See *Figure 12* and *13 Adjusting distance*)
- 3 Go to the chain adjustment page. Press and hold the button on the touch display for setting the tooth lifting cylinder (See *Figure 26* page 26) and simultaneously turn the knob for adjusting the lifting cylinder (See *Figure 5 Pos 5 Lifting setting, feeder unit* page 10)

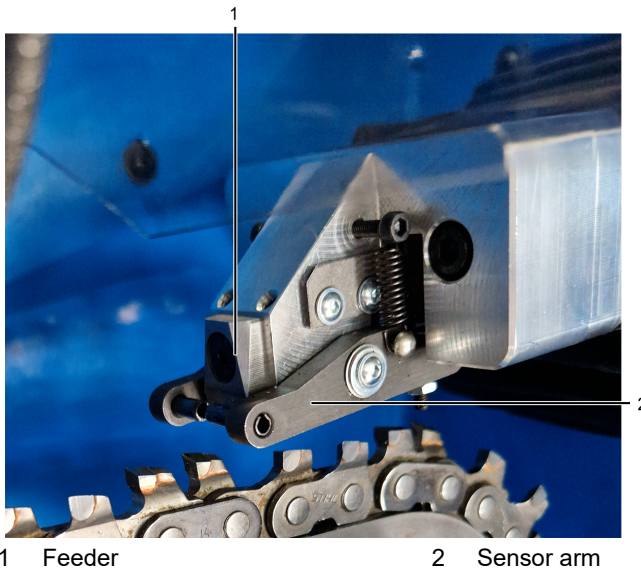


Image 12. Feeder unit

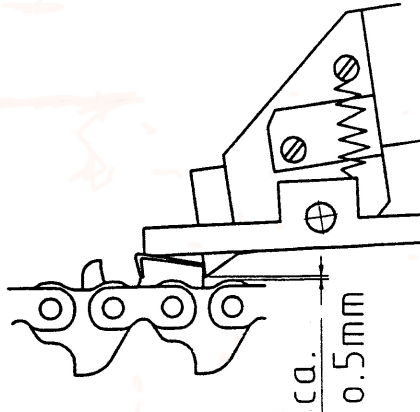


Image 13. Adjusting distance

Grinding depth adjustment

Note

Adjustment that is normally performed after completed Feed setting.

- 1 After feed setting has been performed (See section *Feed setting* page 16), the correct grinding depth needs to be checked.
- 2 On the chain adjustment page on the display, press the down arrow button (See *Figure 26* page 26) and then turn the knob to adjust the grinding depth (See *Figure 6* page 10)
- 3 Test your setting by using the function button for chain setting (See *Figure 26* page 26): press and hold the button on the right side of the display, which will cause the machine to start the grinding motor and lower the grinding unit as long as the button is pressed.

Setting the grinding angle α

Set the grinding angle using the knob next to the scale. (See *Figure 14*)



1 Adjustment knob for grinding angle α


2 Scale, grinding angle α

Image 14. Setting grinding angle scale α

Main screen

Main screen touch display

Start page

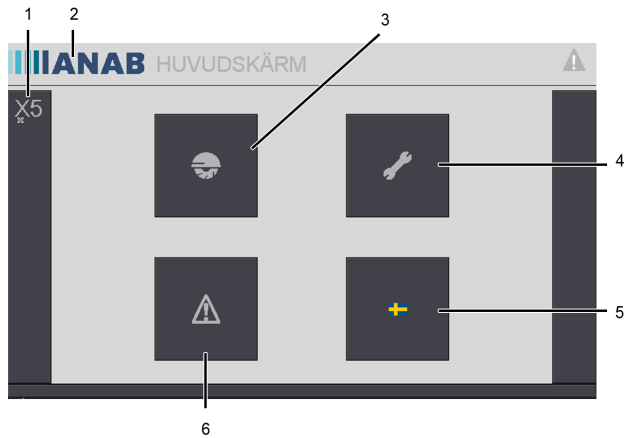

- | | | | |
|---|---------------|---|------------------|
| 1 | Machine model | 4 | Machine setting |
| 2 | Contact page | 5 | Language setting |
| 3 | Grinding | 6 | Alarm page |

Image 15. Main screen touch display


Contact page



Image 16. Contact information

If you have any questions about the machine, you can find all the contact information under the contact page.

Grinding page

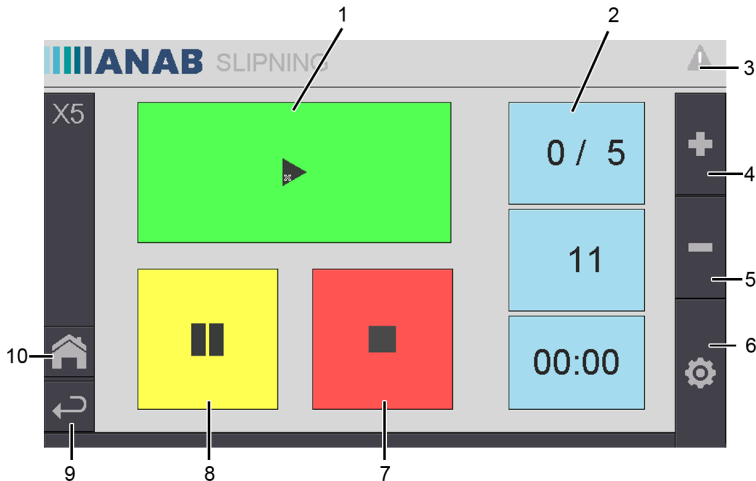

- | | |
|---|---------------------|
| 1 Start | 6 Grinding settings |
| 2 Number of teeth | 7 Stop |
| 3 Alarm triangle (only if alarms are present) | 8 Pause |
| 4 + (Grinder angle setting) | 9 Previous page |
| 5 - (Grinder angle setting) | 10 Home |

Image 17. Grinding page

Note

The pause button pauses the current program. Stop halts the entire program. In the case of Stop, the program must be re-set.

Setting the number of teeth

- 1 Press the Number of teeth button (See *Figure 17 Pos 2 Number of teeth*), after which you will be taken to the submenu for setting the number of teeth.

- 2 Enter the number of teeth for the chain that is to be sharpened.

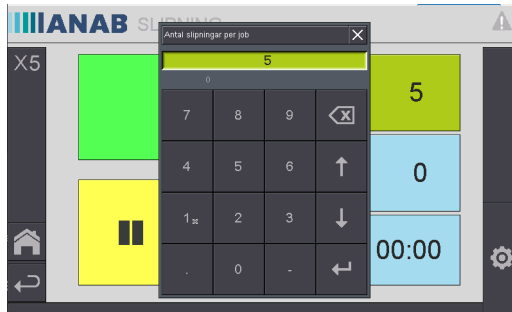


Image 18. Setting Number of teeth

- 3 Confirm selection with Enter (↵).

Grinding settings

- 1 Go to the Grinding page, then press the settings button as shown below.


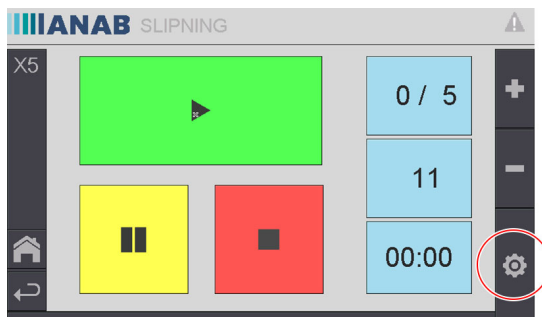


Image 19. Settings button


Press the relevant function to change the image to perform setting.

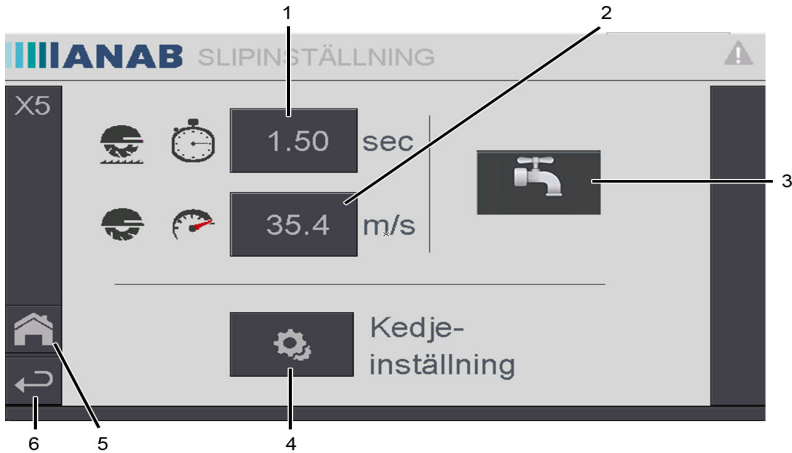

- | | |
|-------------------------------|-----------------|
| 1 Grinding duration | 4 Chain setting |
| 2 Motor speed | 5 Start page |
| 3 Water pump indicator On/Off | 6 Previous page |

Image 20. Grinding setting, chain

Water pump indicator

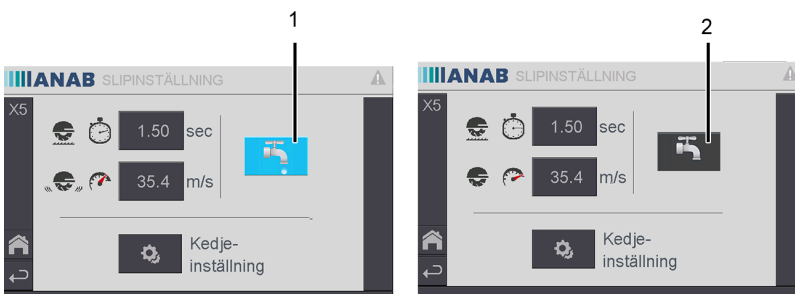

- | | |
|-----------------|------------------|
| 1 Water pump ON | 2 Water pump OFF |
|-----------------|------------------|

Image 21. Water pump On/Off

Setting grinding duration

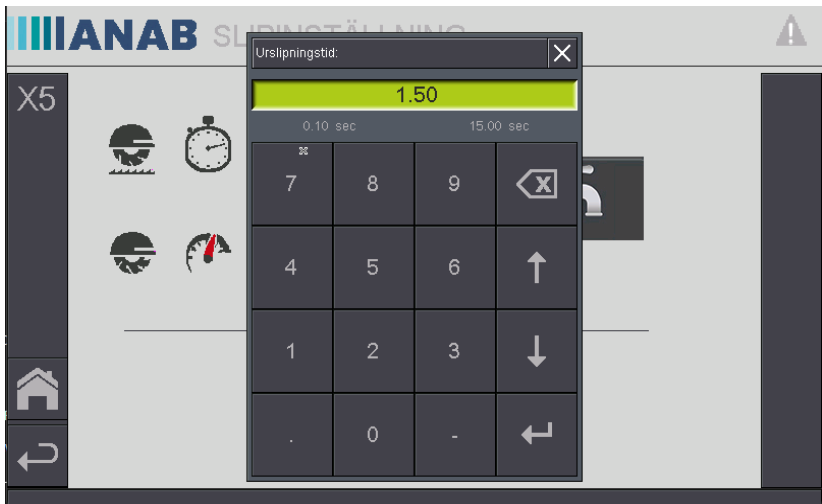


Image 22. Grinding duration setting

- 1 Press setting for grinding duration.
- 2 Enter the value for the selected parameter.
- 3 Confirm selection with Enter (↵).

Note

Grinding duration indicates how long the grinding wheel will be in the bottom position against the chain.

Motor speed

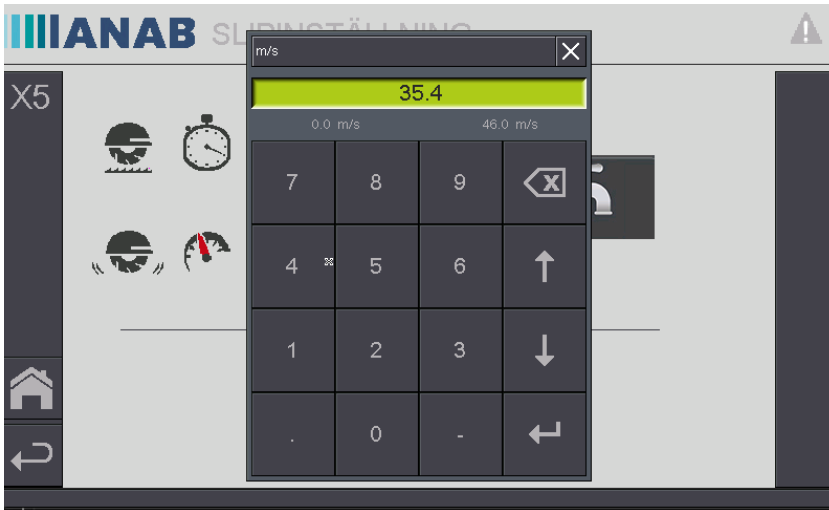


Image 23. Input – motor speed

- 1 Press setting for motor speed.
- 2 Enter the value for the selected parameter.
- 3 Confirm selection with Enter (↵).

Note

Grinding wheel speed Max speed 45 m/s. 60 m/s for Aluminium.

Chain setting

Chain setting – Step 1

After the chain has been positioned correctly (see Figure 13 *Adjusting distance* page 17).

- 1 Press the button according to Figure 24 *Chain setting – Step 1*. The machine then feeds one tooth forward before waiting.
- 2 Set the position with the knob for setting the grinding quantity (see Figure 5 *Operating panel* page 9 and 6 *Operating panel side* page 10).

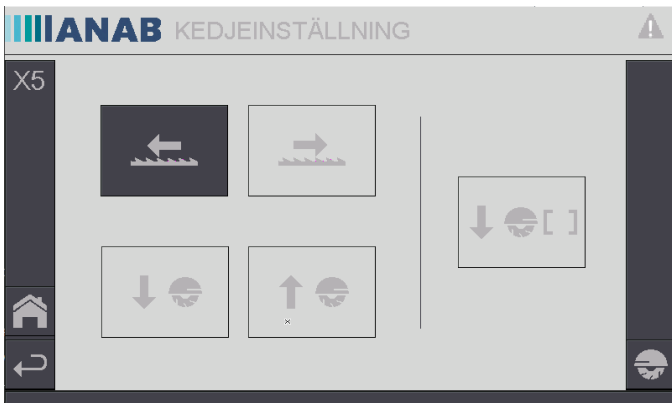


Image 24. Chain setting – Step 1

Chain setting – Step 2

- 1 Press the button according to Figure 25 *Chain setting – Step 2*. The machine then locks the chain and goes back with the feeder so that you can make further settings.



Image 25. Chain setting – Step 2

Chain setting – Step 3

There are two options here. See Figure 26 *Chain setting – Step 3*.

Using the button at the bottom left, lower the grinding unit to make it possible to check the depth setting safely (See Figure 5 *Operating panel* page 9 and 6 *Operating panel side* page 10).

The button at the bottom right is a touch-sensitive button. As long as it is held in, the machine will start the grinding motor and lower the grinding unit to the chain according to the previous setting; when the button is released, the machine will stop the motor and return the grinding unit to the normal position.

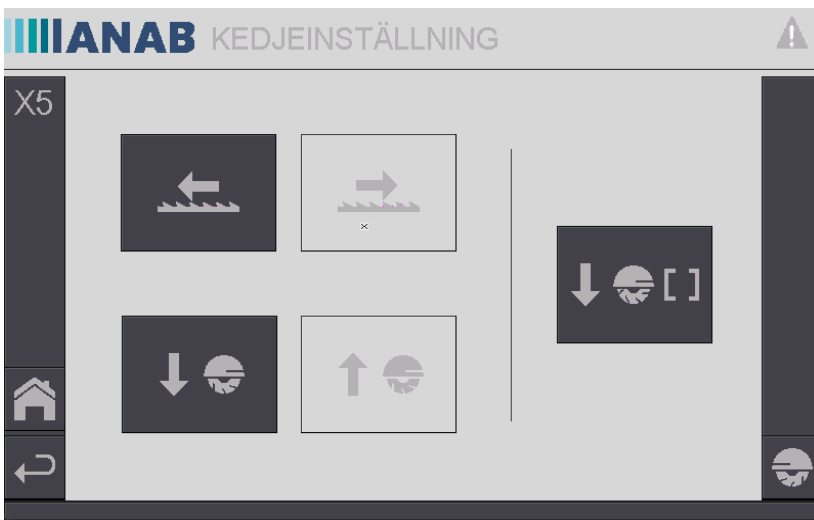


Image 26. Chain setting – Step 3

Chain setting – Step 4

Using the button at the bottom right, the grinding unit is raised back to the normal position.


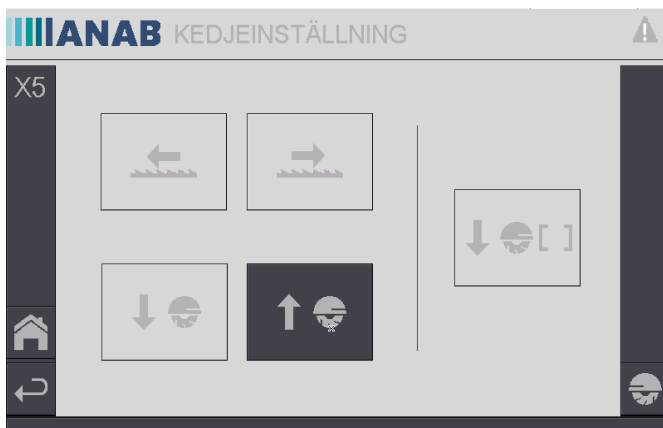


Image 27. Chain setting – Step 4

Machine settings

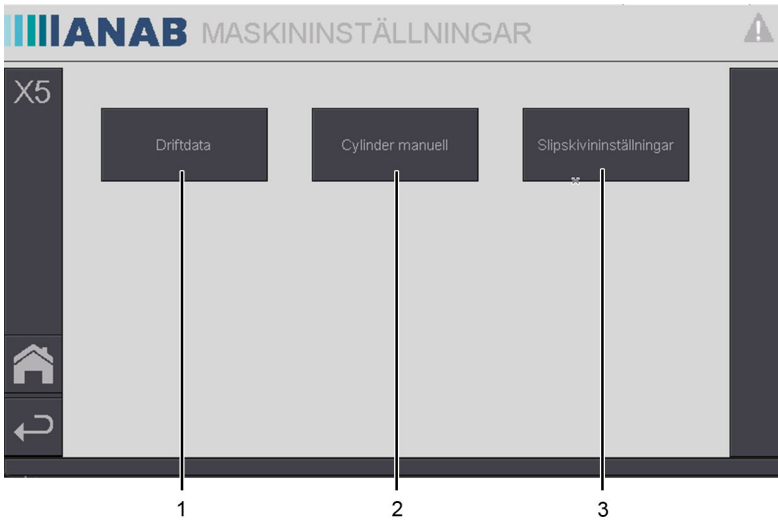

- 1 Operating data
- 2 Cylinder, manual operation
- 3 Grinding wheel settings

Image 28. Machine settings

Grinding wheel setting

1 Press Machine settings – Grinding wheel settings



- | | | | |
|---|---------------------------------|---|--------------------------------------|
| 1 | Counter, grinding wheel | 4 | Rotation lock |
| 2 | Resetting | 5 | Selection for type of grinding wheel |
| 3 | Setting diameter grinding wheel | | |

Image 29. Grinding wheel settings

Direction of rotation

ON = The direction of rotation of the grinding wheel changes.

OFF = The direction of rotation is suitable for profiling.

Cylinder, manual operation



Image 30. Setting for manual operation

Note

Red and Green sliders indicate whether the sensor is active/working. If the sliders indicate red in both cases, the sensor is probably out of order or incorrectly positioned.

Operating data



Image 31. Total operating time

Language setting

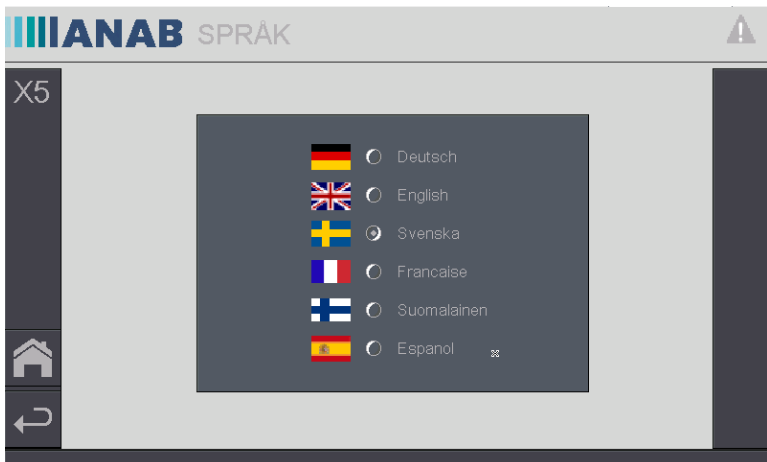


Image 32. Language selection

Note


Press the desired language twice to confirm your selection.

Alarm page

Alarm, grinding



Image 33. Alarm, grinding

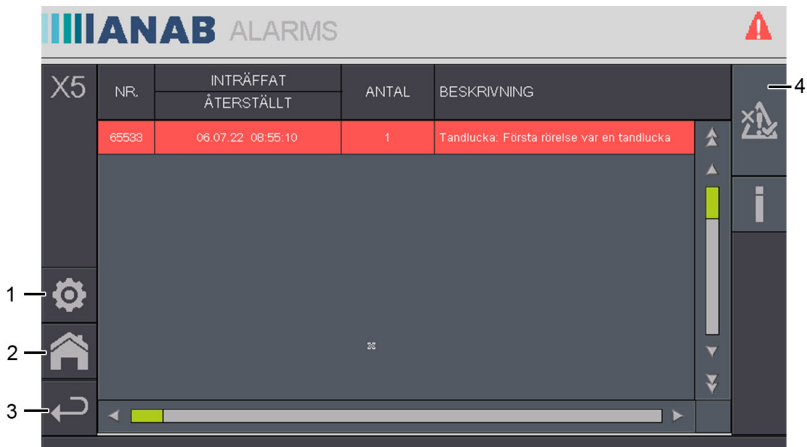

- | | | | |
|---|--------------------|---|-----------------------|
| 1 | Settings | 3 | Previous page |
| 2 | Menu screen – Home | 4 | Alarm acknowledgement |

Image 34. Menu buttons, touch display

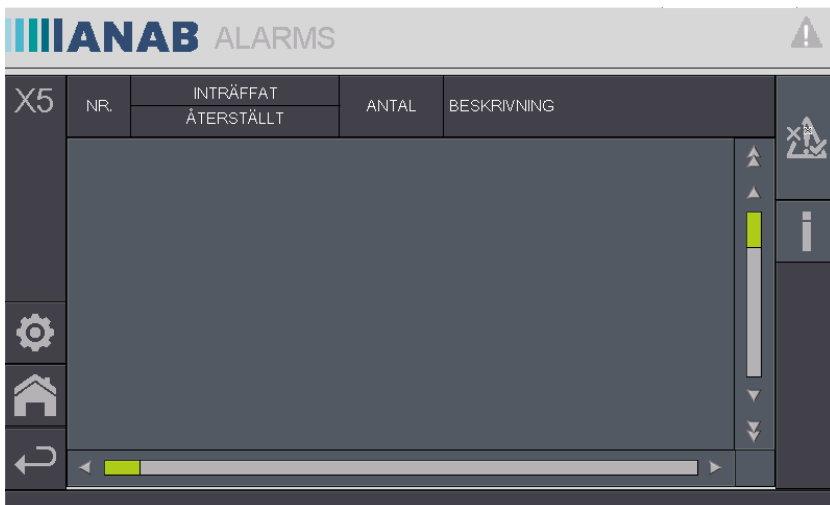


Image 35. Alarm page without alarm

Alarms that need to be acknowledged are listed here.



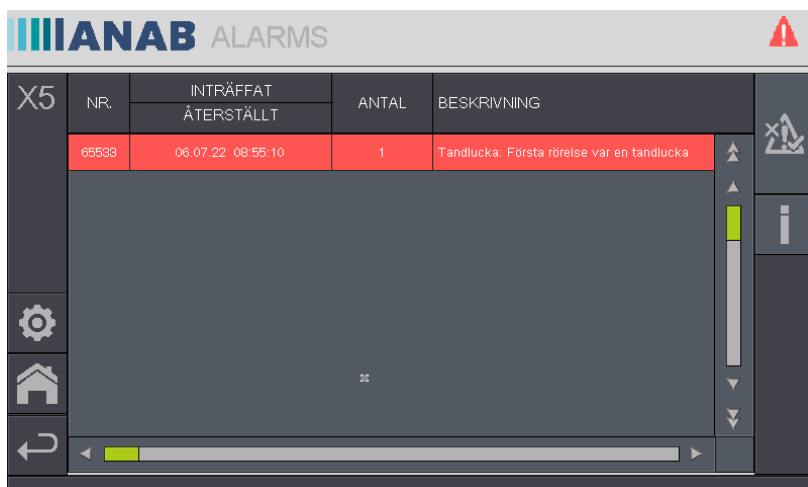


Image 36. Example of alarm

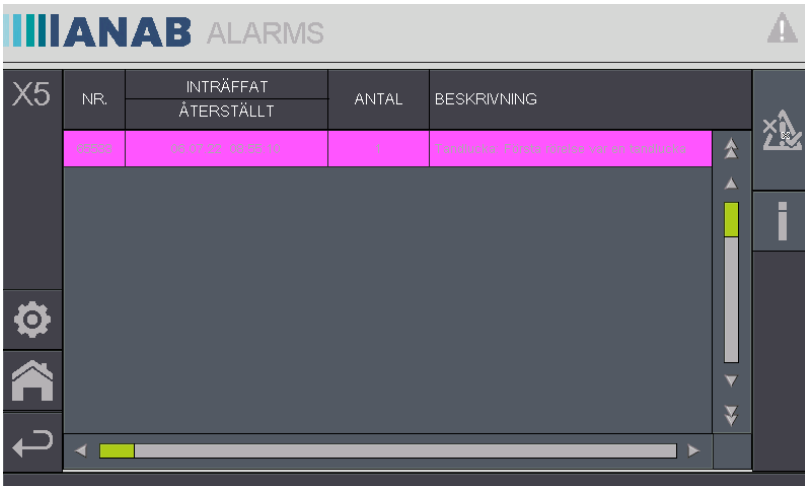

X5	NR.	INTRÄFFAT	ANTAL	BESKRIVNING
		ÅTERSTÄLLT		
	65533	06.07.22 08:55:10	1	Tandlucka: Första rörelse var en tandlucka

Image 37. Acknowledged alarm

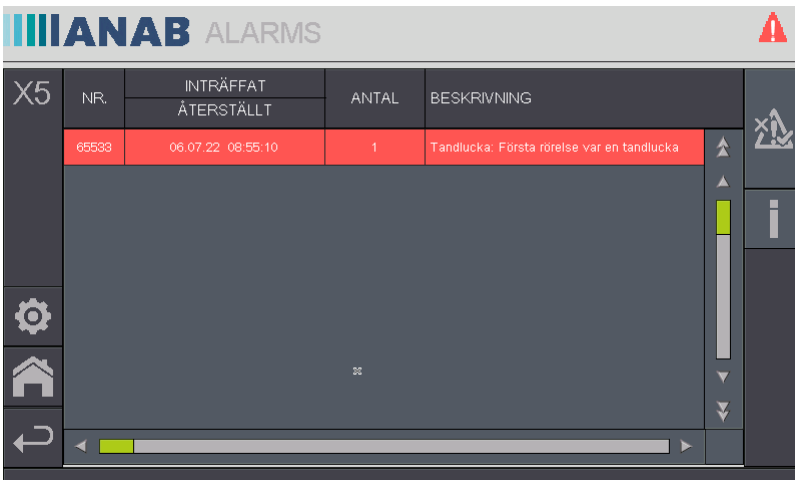

X5	NR.	INTRÄFFAT	ANTAL	BESKRIVNING
		ÅTERSTÄLLT		
	65533	06.07.22 08:55:10	1	Tandlucka: Första rörelse var en tandlucka

Image 38. Alarm page

The alarm is reset with the acknowledgement button on the menu screen.

Maintenance


The machine is designed for long-term, safe operation without the need for special servicing. However, for preventive purposes, some elements should be checked regularly.

Safety

During all forms of maintenance, the **machine's power supply** and **compressed air** must always **be turned off** to eliminate any unnecessary accident risks. During troubleshooting, etc., measures should be taken to prevent accidental activation of the machine.

Daily

- Clean the sensor arms *Figure 39* on the feeder unit
- Clean the chain holder, the “chain rail”, to prevent inadequate clamping.
- Use a cloth or a small brush to clean.
- Avoid cleaning with compressed air as grinding particles can spread into the machine.

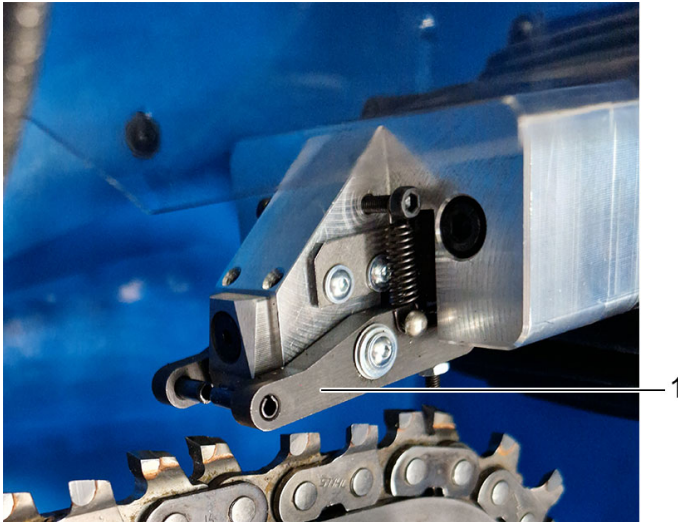


1 Sensor arm

Image 39. Sensor arm on feeder unit

Adjusting the air pressure

- 1 Increasing the pressure: Lift the plastic cover on the pressure regulator and turn clockwise until the gauge shows the correct pressure. (See *Figure 40*)
- 2 Decreasing the pressure: Turn anticlockwise and reduce to just below the desired pressure, then increase to the desired pressure.

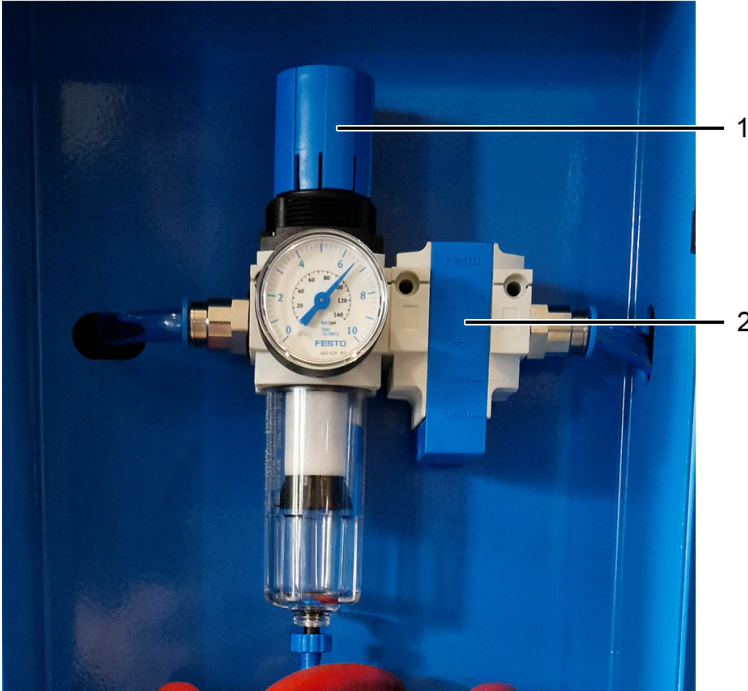

1 Air pressure knob

2 Air shut-off valve

Image 40. Pressure gauge

Note


Recommended working pressure is approx. 6 bar.

If necessary, check/clean compressed air

- Empty the water separator on the pressure-reducing valve. (Loosen by turning the glass cup clockwise)
- Clean the filter. (Mounted in the glass cup)
- Wash the filter with spirits or similar.
- Then blow clean from the inside out and allow to dry.

CAUTION

The glass cup (container) must be cleaned in warm water with dishwashing liquid or regular detergent for household use. Solvents such as acetone, benzene and some alcohols may dissolve the plastic. If you are in doubt, check with ANAB.

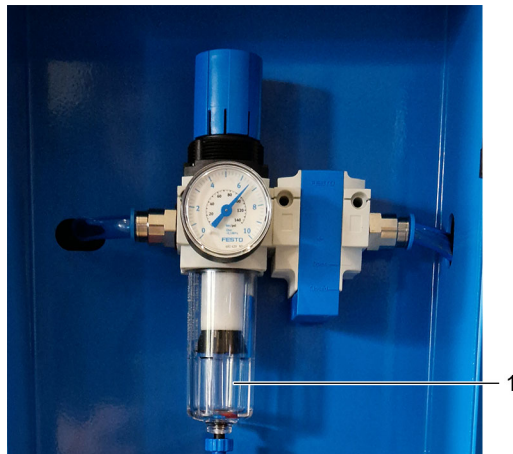


- 1 Filter in glass cup

Image 41. Glass cup with filter

Cleaning machine


- 1 Clean the mating surface between the sensor arms and the microswitches. Use cleaning spray (CRC Bräkleen is recommended) and gently blow clean with compressed air. (See *Figure 42*)
- 2 Clean the entire machine.

- 3 Check electrical connections. Check *Belt tensioning* page 41, motor and grinding wheel.
- 4 Clean filter, see *Figure 43* page 39

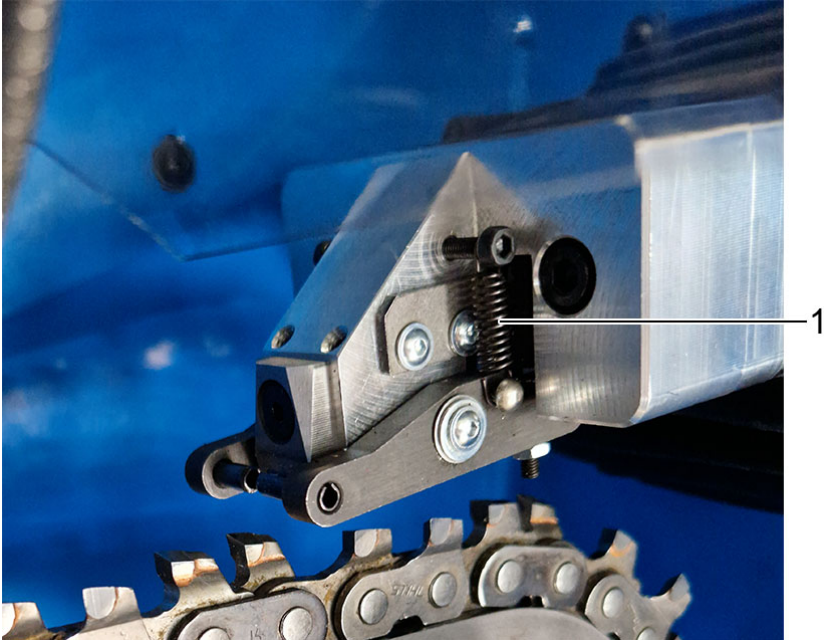

- 1 Microswitch

Image 42. Microswitch on sensor arm

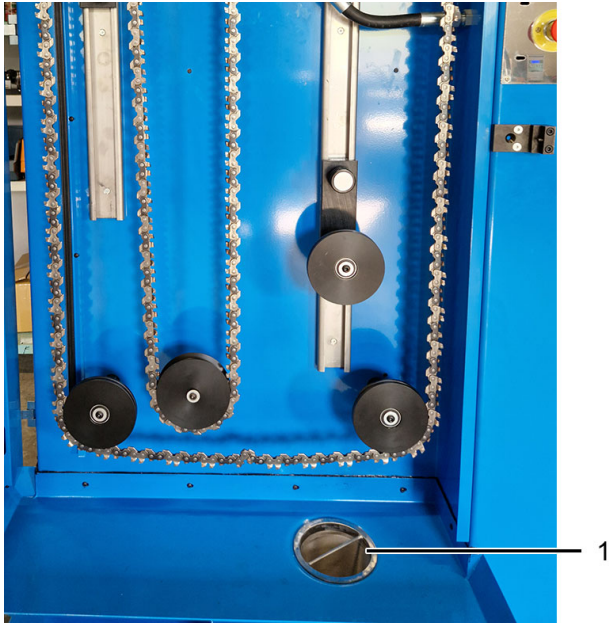

1 Filter for cooling water

Image 43. Metal filter

Changing the grinding wheel

- 1 Turn off the power supply to the machine and make certain that it cannot be activated accidentally.
- 2 Loosen the screws for the cover and remove it.
- 3 Hold the grinding wheel firmly with one hand and loosen the centre bolt (normal right thread) with a 13 mm spanner. (See *Figure 44*)
- 4 Replace the wheel, hold with your hand and tighten the bolt to a torque of at least 40 Nm.
- 5 Refit the cover.

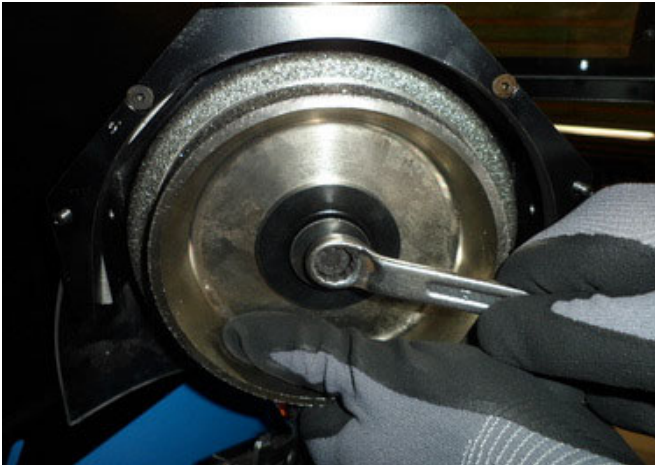


Image 44. Changing the grinding wheel

Note

For the best grinding results, only use original ANAB grinding wheels.

Belt tensioning

- 1 Turn off the power supply to the machine and make certain that it cannot be activated accidentally.
- 2 Remove the motor cover.
- 3 Ease off the four hex screws securing the motor.
- 4 Under the motor, use a screwdriver or similar to stretch the belt. (See *Figure 45*)

CAUTION

Do not stretch too much. It must be possible to push the belt in approximately 10 mm in the middle.

- 5 Retighten the screws on the motor.
- 6 Refit the protective cover.

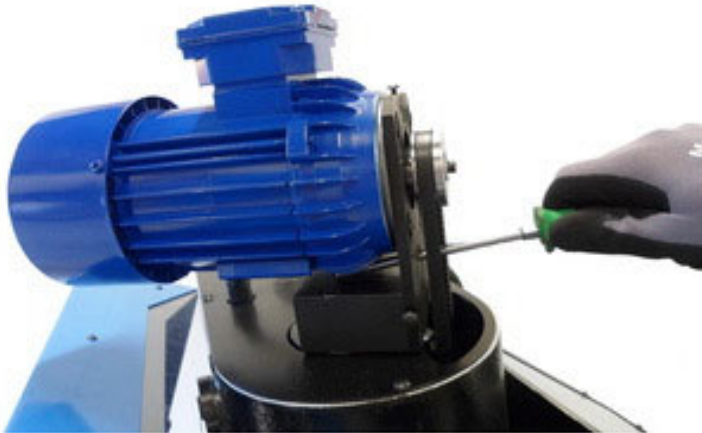


Image 45. Belt tensioning

CAUTION


The belt tension should be checked and adjusted if necessary after approx. 20 hours of operation.

Replacing the drive belt

- 1 Turn off the power supply to the machine and make certain that it cannot be activated accidentally.
- 2 Remove the motor and grinding head covers. Loosen the locking knob with an Allen key.
- 3 Loosen the hex screws securing the motor and unscrew the set screw under the motor.
- 4 Change the belt. Preferably use an original belt from ANAB.
- 5 Tension the belt (refer to the *Belt tensioning* section). Refit the covers, locking knob and screws.

Close-up images


Feeder unit linear control

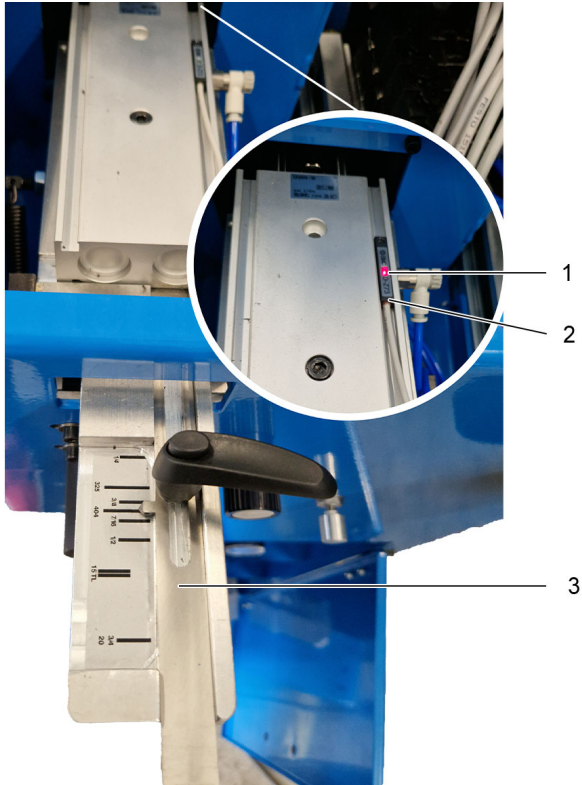

- 1 LED
- 2 Forward feeding sensor
FeederOut
- 3 Pitch setting unit

Image 46. Linear control


Grinding wheel lifting cylinder

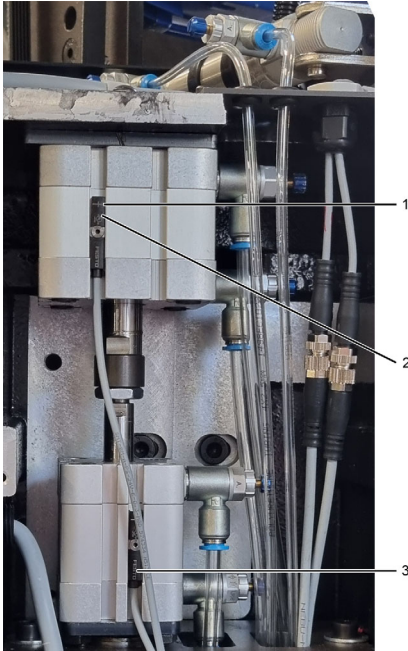

- | | | | |
|---|-------------------------------------|---|-----------------------------------|
| 1 | Limit position sensor, Grinder down | 2 | LED |
| | | 3 | Limit position sensor, Grinder up |

Image 47. Lifting cylinder


Swivel cylinder

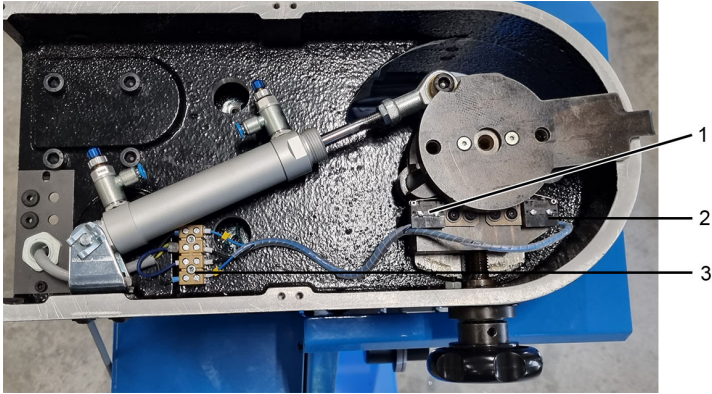

- 1 Left microswitch, Grinder Right
- 2 Right microswitch, Grinder Left
- 3 Terminal block

Image 48. Swivel cylinder

Vertically adjustable chain table

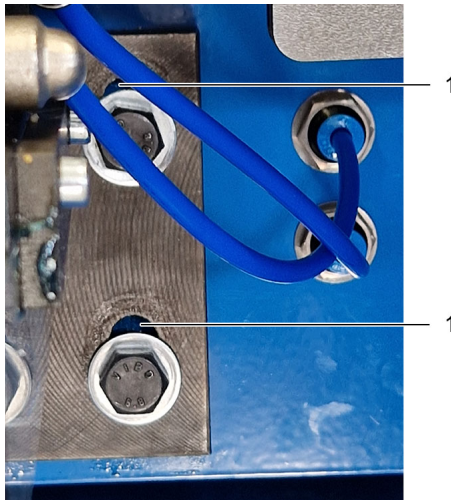

- 1 Oval holes for adjusting height

Image 49. Adjustment of chain holder

Chain holder for long chains


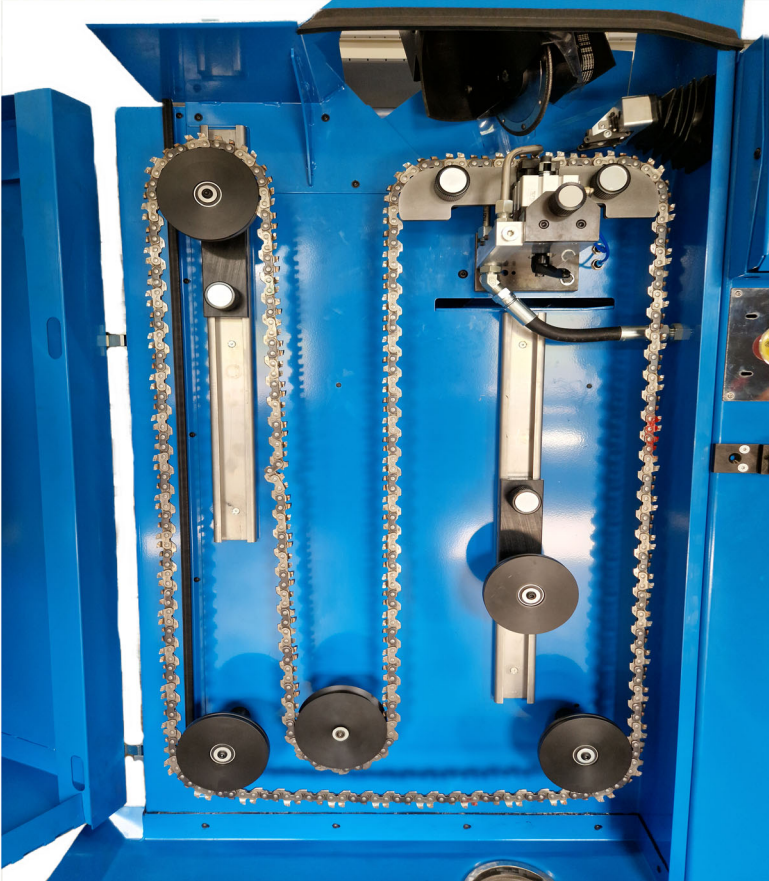


Image 50. Chain holder, long chains

Connections

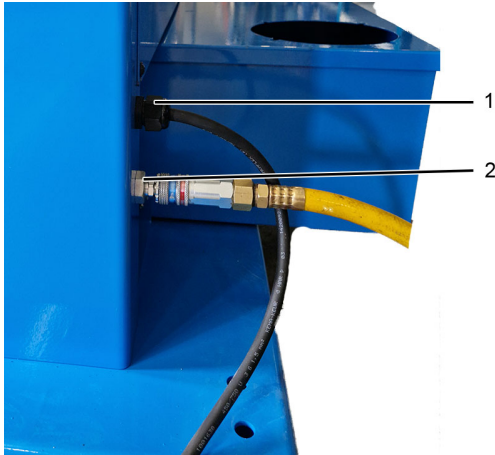

1 Power supply

2 Compressed air connection

Image 51. Connections

Scale, grinder incline

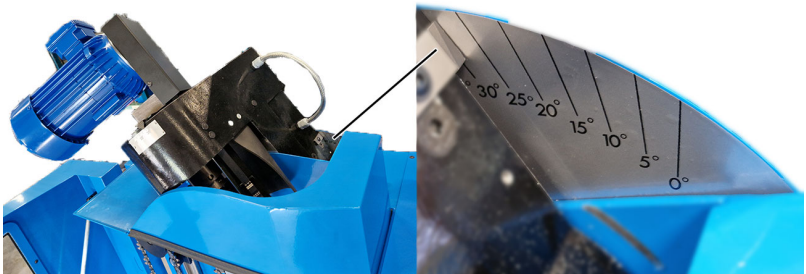


Image 52. Scale, grinder incline

Troubleshooting

Problem solving

The machine does not start

Turn the machine off at the switch (*Figure 5* page 9) and turn on again.
(This resets the electronics)

Motor guard triggered

Look for the fault and reset the motor guard.

Sensor arms do not rise/both sensor arms rise

- Chain fault or mechanical fault that has worn out the chain rail. Not enough play between the arms
- Also check the microswitches at the sensor arms.

Alarm from the frequency inverter

- Is the correct grinding wheel on the **Settings page** selected?
- Turn off the power supply for the machine with the main switch (*Figure 5* page 9) and then turn it on again after a few seconds. (The frequency inverter is reset again)

